

MAINTENANCEADVICE

NL

TOP
LAMINATE

DECOR
TOP

TopLaminate® and DecorTop® are low-maintenance materials for the kitchen and bathroom. To keep kitchen countertops beautiful, proper use and regular cleaning is necessary. Here are some maintenance tips!

1 DAILY MAINTENANCE

Wipe your kitchen worktop daily with a kitchen cloth and detergent. Always rinse well with lukewarm water and dry your kitchen worktop with a clean, dry dishcloth or kitchen paper. This will absorb remaining dirt and any soap and water residue.

Periodic maintenance

To maintain your kitchen worktop, you can also use Top Cleaner, a special laminate cleaner that easily removes dirt from the laminate and leaves a lovely fresh scent. This product is available in the online shop. Do always rinse well with lukewarm water and dry your kitchen worktop with a clean, dishcloth or kitchen paper.

2 REMOVING SPECIFIC STAINS

Grease, coffee/tea or red wine (shiny or brown spots)

Let the Top Cleaner or a detergent soak for a while until the dirt begins to react. Then treat with a melamine sponge. Moisten it slightly and then squeeze it for enough friction. Always rinse well with lukewarm water and dry your kitchen countertop with a clean, dry dishcloth or kitchen paper.

Hard water stains (dull white or brown spots)

Let the cleaning vinegar soak in for a while. Then treat with a melamine sponge. Moisten it slightly and then squeeze it for enough friction. Always rinse well with lukewarm water and dry your kitchen worktop with a clean, dry towel or kitchen paper. Be careful here that cleaning vinegar cannot come in contact with marble or limestone.

Ink, paint or nicotine

Remove drawn-in stains from ink, paint, nicotine or felt pen with turpentine. Always rinse well with lukewarm water and dry your kitchen worktop with a clean, dry dishcloth or kitchen paper.

3 REMOVE STUBBORN STAINS

Use a melamine sponge and detergent. Always rinse well with lukewarm water and dry your kitchen worktop with a clean, dry dishcloth or kitchen paper. Have the stains or circles diminished but not yet completely gone? Then repeat this process. This treatment is not for the daily maintenance of your kitchen countertop!

Attention

- > Never use hard abrasives such as steel wool, sandpaper or diamond. They can permanently damage the kitchen countertop surface!
- > Due to the deeper structure of DecorTop can leave dirt behind in the grooves, making maintenance just a little more intensive than with smooth surfaces



Top Cleaner

Top Cleaner (Art. No. 290126) is a laminate cleaner for daily maintenance. Easily removes dirt from the laminate. You can order this cleaner online: www.dekkerzevenhuizen.nl/shop

More information!

Want more information and cleaning tips or read about special offers from professional cleaners? Then check out: www.dekkerzevenhuizen.nl/onderhoud



Never let liquids dry out. Do not leave fats or foods on the kitchen countertop unnecessarily long.



Hot pans can cause a burn. Always use a trivet near hot objects.



Never cut directly on the kitchen worktop; always use a cutting board.



Never use aggressive cleaners such as paint strippers, brush, metal or oven cleaners, chlorine, sink de-stoppers or other chemicals!



Textured kitchen countertops leave more dirt behind. Rinsing well with clean water and rubbing dry ensures that no dirt remains in the textured surface.